


Maintenance



Lubricate the grease nipple if required.

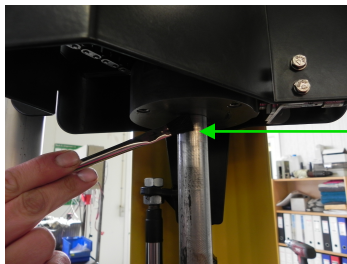

If required, lubricate the top of the probe where the hammer moves up/down.