

Wintex 1000S, 2000, 3000 MAINTENANCE:

Daily:

After three hours in use tighten all screws and bolts.
Check the chain for rotation. Lubricate if necessary.
Check the upper end of the probe. Lubricate if necessary.
Check the grease fitting for rotation. Lubricate if necessary.
Check all screws and bolts.
Clean the probe and the ejector.
Clean the soil box.
Clean the scraper blades.
Common cleaning of the soil sampler.
Check the level of the hydraulic oil and refill with oil if necessary.
Check the hydraulics for leaks.
Clean the oil tank.
Clean the oil cooler.

Check weekly and exchange/adjust if necessary:

50101038	Guiding rolls
16101022	Guiding pipe
16101002	Rotary sensor plate
50101044	Slide bearing
50101045	Gearwheel for rotation, 30 teeth
50101046	Gearwheel for rotation, 12 teeth

Check daily and exchange if necessary:

50101004	O-ring for scraper
50101003	Scraper
50101014	Scraper blade
50101039	Spring roll pin for scraper
16101001	Probe

Exchange after 500 hours in use and at least once a year:

10000002	Hydraulic oil filter
10000002	Hydraulic oil

Exchange if necessary:

15101196	Oil level rod with filter cap
----------	-------------------------------