


Mounting Guidelines Wintex 1000

on John Deere Gator



Mounting of frame and foot switch

Picture 1 shows where to install the foot switch and where to mount the support frame.

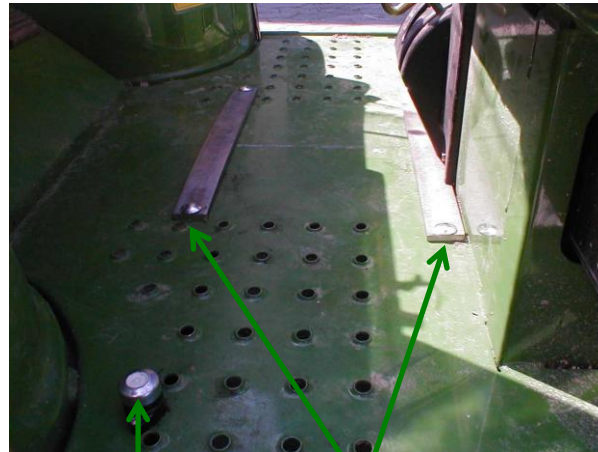

Picture 1

Foot switch

Brackets for support frame

Installing of electric contact

The valves of the Wintex 1000 are fitted on the hydraulic tank.



Picture 2

Contact for Wintex 1000



Picture 3

Start switch



Connecting wires and cables

The cable with the red plug must be connected with the battery of the quad: red +, black -.

Cable (foot pedal) with two wires:

Wire no. 1 and no. 2 must be connected to the foot switch for the left foot.

Cable (start switch) with four wires:

Wire no. 2 and wire no. 3 for the start switch, mounted on the right handle bar. Wire no. 4 for frame. Wire no. 1 to + of the brake light on the handbrake on the left.

Cable (sample cylinder up and down) with two wires:

The wires must be connected to the contacts, which come along with the Wintex 1000.

Sample cylinder down:

Wire 1 to number 1 of the contact. Wire 2 to number 2 of the contact.

Sample cylinder up:

Wire 1 to number 1 of the contact. Wire 2 to number 2 of the contact.

Hydraulic oil

Important: Do only use **DIN HLP22** oil.